



# SQ100Ti Bathroom

For SQ100Ti30 and SQ100Ti20, and 'P' versions

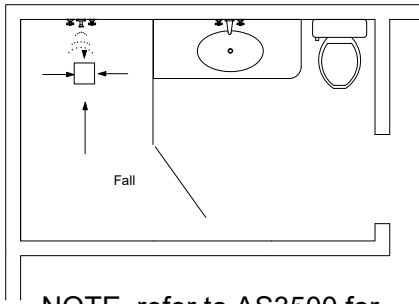

NOTE, refer to AS3500 for specific outlet pipe sizes related to your specific installation.

Cut tile to width and fix into tray. To ensure no metal contamination causes spalling below the tile. It is recommended to use a paint-on waterproof membrane on the interior of the tile insert tray before tiling to ensure no contaminants are trapped below against the stainless.

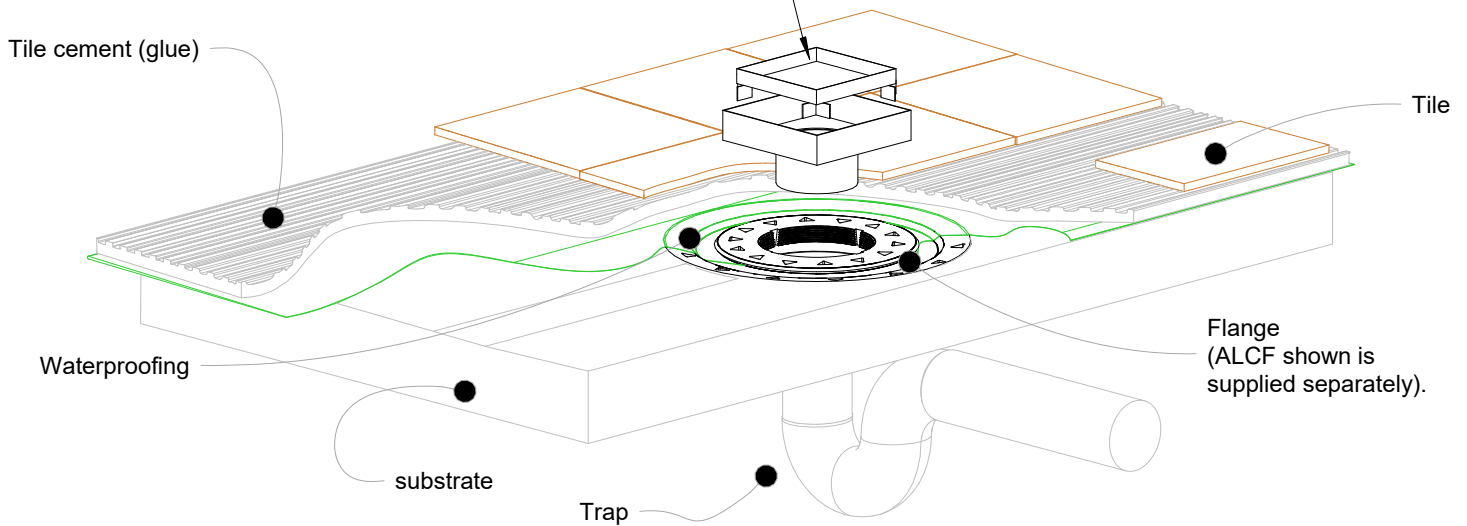

NOTE, this method requires the drain body to be above and separate from the waterproofing. Ensure the floor falls to drain are at least 1:80. Maximum flow rate at outlet is 23 litres per minute with 5mm head above top edge of drain.

